


Bircher Signal Indicator (BSI)

Supplementary sheet

General

RF-Level in open area

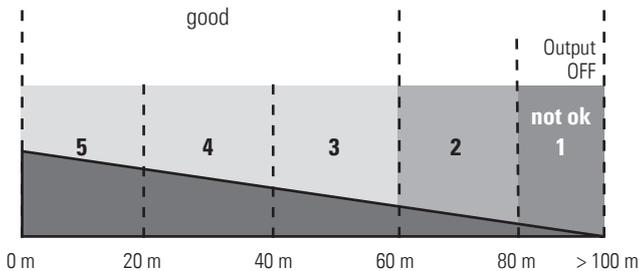

The level is shown by green LED flashes and beeps on the receiver XRF-RD will show signal strength also in numbers on LCD display.

- ⓘ The beeps/LED flashes will occur at random intervals within a few seconds (max. 9 s off) or upon sensing edge/sensor activation.

Two options:

- A. 1st check** within configuration/pairing mode (no gate/door movements)


Activation

Simply activate by **brief press** of the **button within configuration/pairing mode**.

Step by step instruction see page 2.

Use

Move around with selected transmitter (possibly receiver): check for best position/orientation of devices

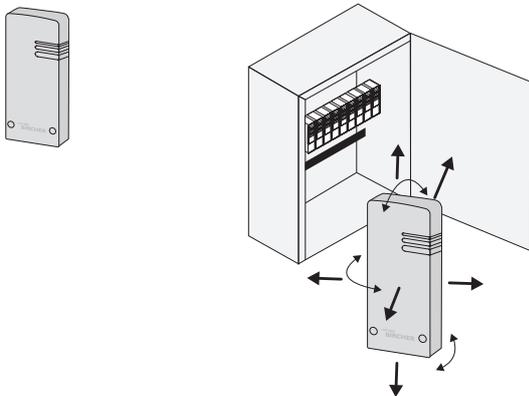

- B. In depth analysis** with normal gate/door operation (more complex to activate)

Due to constant signaling typically only recommended for temporary use.


Activation

Within BSI mode, to activate RF-Signal strength indicator for normal operation **press and hold button until 2nd beep** (approx. 10 s) then leave configuration/pairing mode by long press of button (approx. 2 s, until beep).




Step by step instruction see page 2.

Use

Have gate/door running and observe over various cycles if BSI stays within acceptable limits (best \geq level 3)

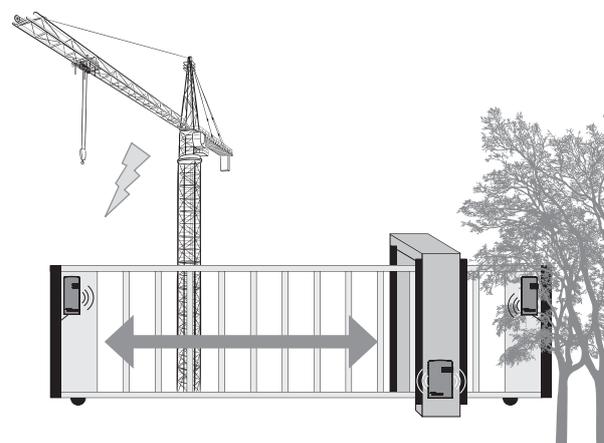


Step by step instruction

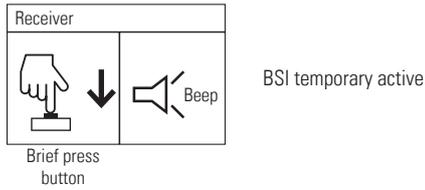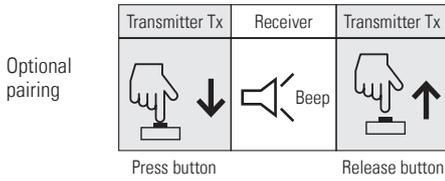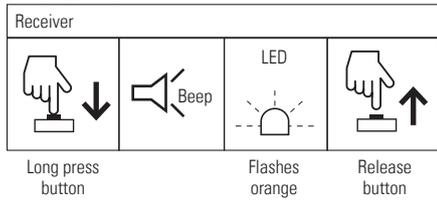


i Press one sensing edge/activate one sensor to set which transmitters RF-Signal shall be monitored.






To deactivate

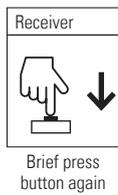


Leave pairing mode

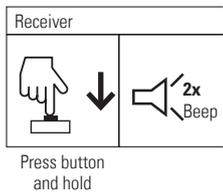

Step by step instruction

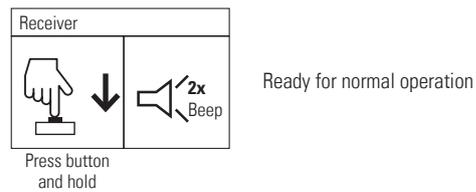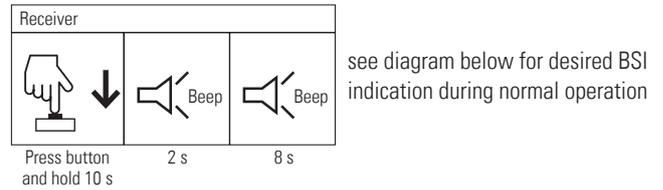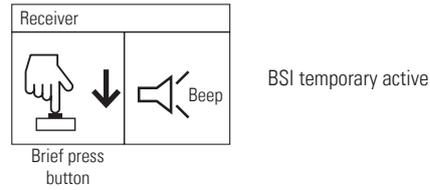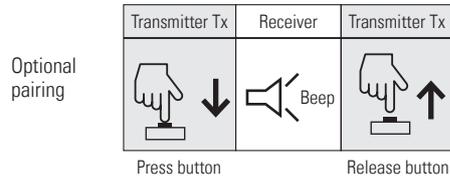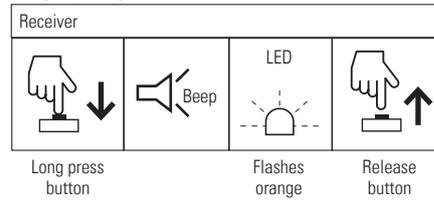

To deactivate repeat sequence 2x (see diagram below)

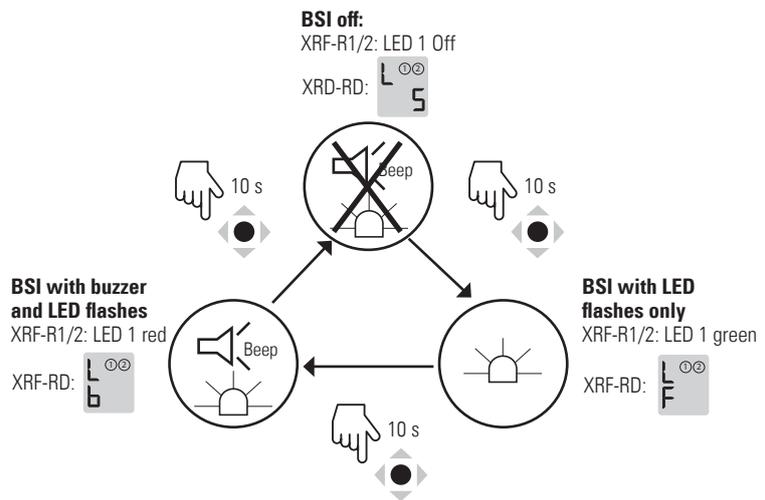

Contact

BBC Bircher Smart Access, BBC Bircher AG, Wiesengasse 20, CH-8222 Beringen, www.bircher.com