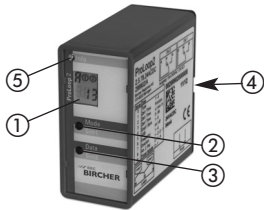


ProLoop2 (11-pin)

Loop detector for industrial doors and gates, car parks and parking bollards

Translation of the original instructions

General



- ① LCD display
- ② «Mode»-button
- ③ «Data»-button
- ④ Plug-in connection, 11-pin
- ⑤ Info LED

1 Safety instructions



- Read these operating instructions thoroughly before putting the device into operation and keep them for future reference.
- Failure to follow these safety precautions may cause damage to device or objects, serious personal injury, or death.
- Do not use this product other than for its specified application.
- These devices and their accessories may only be commissioned by trained and qualified personnel.
- The 24 V AC/DC device may only be operated at safety extra-low voltages (SELV) according to EN 61558 with safe electrical isolation. The wiring must be protected against mechanical damage.
- Pay attention to all local relevant electrical safety regulations!
- Before commencing work, remove the power supply from the device/installations!
- If malfunctions occur that cannot be rectified, shut down the device and send it in for repair.
- These devices are only allowed to be repaired by the manufacturer. Tampering and alterations are not permitted. This will invalidate all guarantee and warranty claims.

2 Mechanical mounting in the switch cabinet

The 11-pin version of the ProLoop is mounted onto a mounting rail base (ES 12). This base is ordered and delivered separately as it is not included in the scope of delivery.

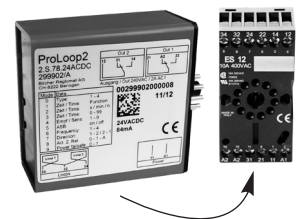
3 Electrical connection

- The loop connection wiring to the loop detector must be twisted at least 20 times per meter.
- Please wire the device in accordance with the terminal assignment. Make sure the terminals are assigned correctly.

Terminal connection diagram, ES 12 base assignment

- Check the electrical connection (base assignment) when exchanging a loop detector from another manufacturer.

A: Supply voltage connection	B: Loop connection 1-channel device	C1: Loop connection 2-channel device	C2 ¹⁾ : Loop connection 2-channel device	D: Relay connection output 1	E: Relay connection output 2



¹⁾ Only applies to ProLoop2 with the designation «... .S.78. ... »

4 Value and parameter setting options

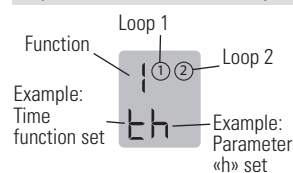
General

The settings of the ProLoop devices in this chapter are shown and explained for the 1-loop device. The settings for loop 2 of a 2-loop device should be made using the corresponding method.

4.1 LCD display and controls

Standard display 1-loop device	Standard display 2-loop device	Control button	Control button

Explanation of the LCD display



Explanation of the LED

- Red & green: Start-up phase
- Green: Operation
- Red & green: Configuration
- Flashing green: Loop activated
- Flashing red: Error
- Flashing red + green: Simulation

4.2 Basic functions 0 (see Table 4.11a for settings)

Parameters

- 1: Door and gate** The assigned output relay picks up when the loop is activated and drops out when the loop returns to a non-activated condition.
- 2: Barrier** The assigned output relay picks up when the loop is activated and drops out when the loop returns to a non-activated condition.
- 3: Quiescent current** The assigned output relay drops out when the loop is activated and picks up again when the loop returns to a non-activated condition.
- 4: Direction logic** Output 1 switches if an object moves from loop 1 to 2. Output 2 switches if an object moves from loop 1 to 2. For a short time, **both loops** must be activated. The output resets again when leaving the second loop. Both loops must have returned to a non-activated condition for another direction detection.

0: Loop 2 Loop 2 can be deactivated in a 2-loop device.

Relay response to malfunctions (see chapter 6 Troubleshooting):

1. Door/gate systems	A malfunction causes the output relay to be released. The alarm relay drops out.	2. Barrier	A malfunction causes the output relay to pick up. The alarm relay drops out.	3. Quiescent current	A malfunction causes the output relay to be released. The alarm relay drops out.	4. Direction logic (2-loop device only)	A malfunction causes the output relays to be released.
----------------------	--	------------	--	----------------------	--	---	--

4.3 Time functions 1, time unit 2 and time factor 3 (see Table 4.11a for settings)

<p>h The relay picks up when the loop is activated and drops out when the loop is exited.</p>	<p>On delay: The relay picks up after the time t when the loop is activated and drops out when the loop is exited.</p>	<p>F Off delay: The relay picks up when the loop is activated and drops out after the time t when the loop is exited.</p>
<p>Activation pulse: The relay picks up when the loop is activated and drops out again after the time t.</p>	<p>Impulse by leaving the loop: By leaving the loop, the relay picks up after the time t, relay drops out.</p>	

4.4 Sensitivity 5 (see Table 4.11a for settings)

The sensitivity 5 (= Sensitivity) of the loop detector can be adapted in 9 stages: 51 = Lowest sensitivity, 59 = Highest sensitivity, 55 = Factory setting. The sensitivity setting depends on the frequencies (see chapter 4.6 Frequency).

4.5 Automatic Sensitivity Boost ASB 5 (see Table 4.11a for settings)

ASB (= **A**utomatic **S**ensitivity **B**oost). ASB is required in order to be able to recognise trailer drawbars after activation.

4.6 Frequency 5 (see Table 4.11a for settings)

Four different frequencies F1, F2, F3, F4* can be set in order to avoid interference when using several loop detectors. These settings influence the sensitivity (the sensitivity can be set in the range 1–7 for frequencies F1 to F3). F2 to F4 can be set for inductance < 150 µH and only F4 can be set for inductance < 75 µH.

4.7 Direction logic 7 (see Table 4.11a for settings)

The direction logic function can only be used with a 2-loop device. Direction logic must have been set in the basic function (see chapter 4.2). Detection can be performed from: → Loop 1 to loop 2 → From loop 2 to loop 1 → from both directions

4.8 Output 2 B (see Table 4.11b for settings)

Output 2 can also be set as an alarm output.

4.9 Protection against supply voltage failure 9 (see Table 4.11a for settings)

Note: The set parameter values are preserved in the case of a mains failure - regardless of the «Protection against supply voltage failure» function.
P 7 = Protection against supply voltage failure activated: The sensitivity is restricted to 1–5.

4.9.1 Signal characteristics with protection against supply voltage failure active (Function 9 = 1)

For Activation (e.g. Barriers)

Basic function 0 = **2 Barrier systems**

Output	Without power	Initialisation	Free	Occupied	Free
open (no)	-----	-----	-----	-----	-----
closed (nc)	-----	-----	-----	-----	-----

For Safeguarding (e.g. Barriers, bollards)

Basic function 0 = **3 Quiescent current**

Output	Without power	Initialisation	Free	Occupied	Free
open (no)	-----	-----	-----	-----	-----
closed (nc)	-----	-----	-----	-----	-----

4.10 Changeover from operation to configuration mode

1- loop device

Display after start-up:		Touch the «Mode» button once to change to configuration mode		
-------------------------	--	--	--	--

2- loop device

Display after start-up:		Touch the «Mode» button once to change to configuration mode			① Loop 1 is selected			② Loop 2 is selected
-------------------------	--	--	--	--	----------------------	--	--	----------------------

Back to automatic mode: Press «Mode»-button >1 second)

*factory settings

4.11 Configuration mode

Note on 2-loop device: After loop 1 has been set, the parameters for loop 2 are set (make the settings using the same procedure) and the settings are not shown in the table with the exception of the direction logic

Table 4.1a Settings











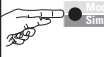






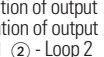
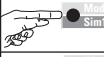




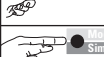
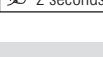
Function	LCD display	Button operation functions	Button operation parameter							Notes
0 - Basic function			Door/gate systems*							With deactivation of Loop 2 the output 2 becomes configurable → 8
1 - Time function			∞*							Max. presence
2 - Time unit			This display does not appear with time function th (∞)							The time unit multiplied by the time factor gives the set time.
3 - Time factor			This display does not appear with time function th (∞)							
4 - Sensitivity			5 = Sensitivity							Setting restrictions: rotation against supply voltage failure (with P1): Value 1-5
5 - Automatic Sensitivity Boost ASB			ASB stands for Automatic Sensitivity Boost							
6 - Frequency										
7 - Direction logic			This display appears only with a 2-loop device							The direction logic function can only be implemented with 2 loops and a 2-loop device
8 - Output 2 configuration										Loop 2 has to be deactivated «0» → Basic function
9 - Protection against supply voltage failure										If parameter 9 = P 1 parameter 5 must be set to off (5 = RD).
A - Operating mode										Possible displays in case of error: see chapter 6 of these operating instructions

*factory settings

Table 4.11b Addition to function 8 (configuration of output 2) and function 0

	Loop 2	Bemerkung
1-loop device, 2 relays	Output 2 1/0/A*	1 = Output 2 active; 0 = Output 2 off; A = Output as alarm output
2-loop device, 2 relays	active deactivated	Parameter 8 is not possible and is not displayed 1 = Output 2 active; 0 = Output 2 off; A = Output as alarm output


5 Simulation mode

Changeover to simulations mode	Press «Sim1» button		Press «Sim2» button		Press «Sim2» button		Press «Sim2» button		Anmerkungen	
Changeover to simulation mode: Press the Sim1 + Sim2 buttons simultaneously for 2 seconds.	 2 seconds	+	 2 seconds							
Simulation mode:										
Activation of the loop		 L0	 L1	 L0	 L1	 L0	 L1	 L0	 L1	L0 - No loop activation (time functions are active) L1 - Loop activation (time functions are active) ① - Loop 1 ② - Loop 2
Activation of the output relay	 O0	 O1	 O0	 O1	 O0	 O1	 O0	 O1	O0 - Activation of output O1 - Activation of output ① - Loop 1 ② - Loop 2	
Alarm output activation	 A0	 A1	 A0	 A1					A0 - Switch off alarm relay A1 - Switch on alarm relay	
Inductance of loop 1	 U225								Measurement of the inductance, value in µH	
Inductance of loop 2	 U221								Measurement of the inductance, value in µH	
Exiting simulation mode	 A00								Return to function mode	

6 Troubleshooting

 If an error occurs, operating mode «A» and error display «E» light up alternately and an error code such as E 012 is displayed. The LED changes to flashing red, the 4 most recent errors are stored and can be interrogated.

Display	E001	E002	E011	E012	E101	E102	E201/E202	E301	E302	E311	E312
Error	Interruption Loop 1	Interruption Loop 2	Short circuit Loop 1	Short circuit Loop 2	Under-voltage	Over-voltage	Saving error	Loop 1 too large	Loop 2 too large	Loop 1 too small	Loop 2 too small

 Briefly pressing the «Data» button shows the last of 4 errors on the display. Another short press switches to the error before that, and so on. When the button is pressed for the 5th time, the device switches back to automatic mode. If you press the «Data» button for 4 seconds during the query, all error messages are deleted. The figure shows memory slot 1 in which error 001, Interruption loop 1, has been stored (example).


7 Reset

 2 seconds	Reset 1 (recalibration) The loop(s) is/are recalibrated.	 8 seconds	Reset 2 (factory setting) All values (except the error memory) are reset to the factory settings (see Table 4.11a). The loop(s) is/are recalibrated.
---	--	---	--

8 Most important technical data

	ProLoop2 11-pin
Supply voltage / Current consumption / Power consumption	<ul style="list-style-type: none"> 24ACDC: 24 V AC -20 % to +10 %, 50/60 Hz, 84 mA, max. 1.8 W 24 V DC -10 % to +20 %, 84 mA, 1.3 W 230 AC: 230 V AC -15 % to +10 %, 50/60 Hz, 16 mA, max. 3.7 W
Loop inductance	max. 20 to 1000 µH, ideally 80 to 300 µH
Loop connection wiring	At 20-40 µH: max. 100 m at 1.5 mm ² At >40 µH: max. 200 m with 1.5 mm ² min. twisted 20x/m
Loop resistance	< 8 Ohm with connection wire
Output relay (loop)	AC-1: max. 240 V AC, 50/60 Hz; 2 A / DC-1: max. 30 V DC; 1 A
Dimensions	36 x 74 x 88 mm (W x H x D)
Housing mounting	Mounting rail installation via 11-pin base ES 12
Connection type	Screw terminals base ES 12
Protection class	IP 20
Operating temperature	-20°C to +60°C
Storage temperature	-40°C to +70°C
Air humidity	<95% non-condensing

9 EU Declaration of Conformity

 See attachment

10 WEEE



Devices with this symbol must be treated separately during disposal. This must be done in accordance with the laws of the respective countries for environmentally sound disposal, processing and recycling of electrical and electronic equipment.

11 Contact

BBC Bircher Smart Access, BBC Bircher AG, Wiesengasse 20, CH-8222 Beringen, www.bircher.com
Designed in Switzerland / Made in Bulgaria